

Dishwasher Instructions

We recommend using one of those 2 programs below:




Normal/ Light Soil. Main Wash up to 65 C/Final Rinse. Recommended daily program.



Normal Soil. Prewash/Main wash up to 50 C/ 1 intermediate rinse/Final Rinse/Drying

Washing Machine Instructions

Recommended programs: *Mix* or *Katoen Eco*

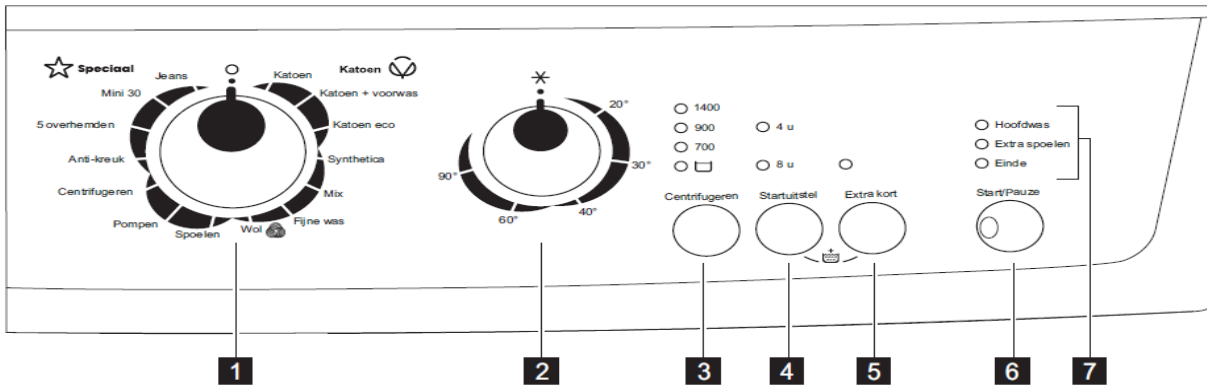

1	2	3	4	5	6	7
Program Selector	Temperature Button	Spin Reduction	Delay Start Program	Short Cycle	Start/Pause Button	Indicator Pilot Lights

Program Selector Selection

0	<i>Off Condition</i>	Katoen (90°/1200rpm)	Cotton normally soiled	Katoen +voorwas (90°/1200rpm)	Cotton + prewash
Katoen Eco (40°/1200rpm)	<i>Economy</i>	Synthica (60°/1200rpm)	Synthetics	Mix (20°/1200rpm)	Lightly soiled
Fijne was (40°/700rpm)	<i>Delicates</i>	Wol (40°/1200rpm)	Wool	Spoelen	Rinse
Pompen	<i>Drain</i>	Centrifugeren	Spin	Anti-Kreuk	Easy Iron (40°/900rpm)
5 Overhemden (30°/900rpm)	<i>5-6 shirts</i>	Mini 30 (30°/700rpm)	Synthetics & Delicates. Freshening Up	Jeans (60°/700rpm)	Denim

At the end of every cycle, check from the door seal and remove objects that could be trapped in the fold.

Also, please remember to leave the door open or at least ajar (this will prevent the formation of an unpleasant odor)

Oven Instructions

1. Turn the oven function control knob to the required cooking function .

2. Turn the thermostat control knob to the required temperature.

Oven Function Control Knob



Oven is off



Conventional cooking - Heat from both the top and bottom element - even heating



Top heating element - Use top element only to finish cooked dishes (lasagna, cauliflower cheese)



Bottom heating – Use bottom element only to ensure base is cooked (blindbake pastry, quiche)



Full Grill - Full grill element



Inner grill element only - Can be used for grilling small quantities